

Battery setup on FOX AIO

How to set your FOX Battery BMS Dip Switch,

Please note this is not on the batteries, This in on the BMS unit in the FOX AIO,


Step 1:

Install your batteries,

Either 2, 3 or 4 batteries,

Step 2:

On the BMS unit in the FOX AIO, Please select the correct Dip Switch settings regarding the amount of batteries your system has,

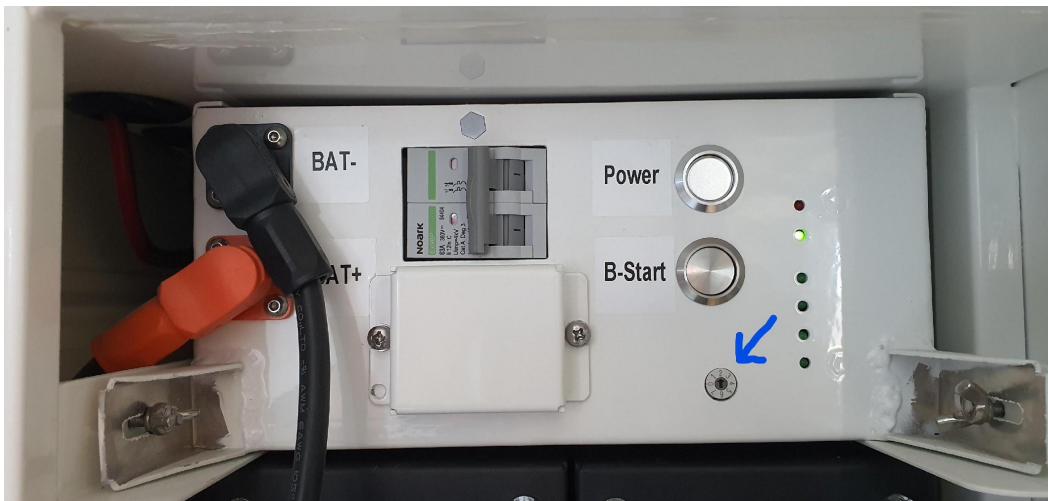

- Before starting, please dial DIP to the correct position. DIP represents the number of HV2600 in the system. Please refer to the following table for details:

DIP position	The number of HV2600
0	2
1	3
2	4

- Turn on DC switch and press the POWER switch, all the light will light up, and the green and red LED on the HV2600 module will light up for 1s at the same time, you will hear the sound of closing and cutting off the relay in BMS BOX to prove that the system works normally.